

## Driver Pace Lights

095191-1 – Smart Driver, Pace, Light, 3”LED, 24VDC



Hydro-Chem, Inc.  
6605 Broadmoor Ave SE  
Caledonia, MI 49316

Office: (616) 531-6420  
e-mail: service@hcs-clean.com

<b>Control Voltage</b>	24VDC
<b>Approx. Dimensions</b>	4"W x 4"H x 2.813"D

### General Info

The purpose of this manual is to provide the necessary information to install and operate the Hydro-Chem equipment to exceed your defined expectation.

The Pace Lights will come ready to wire to. Contractor wiring specs may be found within the document holder of the MCP.

### Installation & Set-Up

The pace lights are typically mounted at 7'-0" above finished floor. The first pace light should be placed lengthwise in the wash bay where shown on the project MEP and then the remaining lights are typically spaced 10' apart on-center. The wiring instructions are found within the Electrical Packet for the system. There it is shown that the red wire from the light is the signal wire and black is 24VDC.

### Troubleshooting

<b>Issue</b>	<b>Potential Solution</b>
Pace Light not activating	Check that there is 24VDC being supplied by the MCP and that the MCP's Power Supply is on. If not, trace the power to find the break.
	If 24VDC is being supplied and the Pace Light is wired correctly, replace the light and test on separate supply.